



**Bounce Universe Party Rentals**  
**Hot Dog Steamer Rental Operating Instructions**  
469-600-2291 / [www.bounceuniverse.com](http://www.bounceuniverse.com)

**INSTALLATION**

1. Place the unit in a prominent location on a level counter, where the hot dog machine will attract attention.
2. Precaution should be taken so customers do not come in contact with the hot unit.
3. Plug the power cord into a suitable (20 amp) 120-volt outlet that can provide the required wattage. Having other appliances on a circuit, may prevent your unit from receiving the necessary voltage.

**NOTE:** Make sure the power switch is OFF before you plug it in, and make sure you turn the power switch back to OFF before you unplug it.

**GENERAL OPERATING PROCEDURES**

1. Remove all baskets and floor plates from inside the machine; then add water to submerge the heating element under water. It is very important that you do not over fill the heating element with water or the machine will leak.

**NOTE:** Add enough water to slightly submerge the heating element under water. Do not over fill more than 50% of the bottom basin or else the machine will leak when it's overfilled with water.

2. Place the hot dog franks on the smaller basket and the buns on the larger basket inside the machine.
3. Turn the machine to the ON and high #6 heat setting.

**COOKING**

Cooking time will vary depending on the starting temperature and the qualities of the product. Average cook time is 1 hour.

**NOTE:** Once the hot dogs are cooked, set the heating setting to a lower level so the hot dogs do not overcook and get soggy with too much steam. A good level to keep them warm after they are fully cooked is heat setting #3.

**CLEANING**

No Cleaning is required just empty out all the leftover hot dogs, buns and water.

**WARNING** After use be careful water is extreme hot. Let the unit sit for about 1 hour before attempting to empty the water. There is a knob in front of the machine that you can remove to drain the machine. CAUTION water might be extremely hot.

**TROUBLESHOOTING** If you have any problems at all with your machine rental, it is very important that you contact the office at 469-600-2291 and speak to someone about it. We will try to troubleshoot it over the phone, and if that does not work, we will send someone out to fix it or exchange the machine. If you fail to call or refuse an exchange a refund will not issue.