



Cindy's Jumpers
Generator
Operating Instructions
562-841-7719

INSTALLATION

1. Position Generator Exhaust to point away from the inflatable or where people are located. **DO NOT USE GENERATOR INDOORS.**
2. Position Generator at least 15 feet away from inflatable unit.

GENERAL OPERATING PROCEDURES

1. Turn the power switch to "ON".
2. Make sure the Choke lever is position the "Start" position, which is the left side. As soon as you pull the starter rope switch the Choke lever to the right "Run" position.

TURNING OFF GENERATOR/REFUELING

1. To turn off the generator simply unplug everything from the circuit outlets and switch the "OFF" button.
2. If you are refueling the generator, first you must shut it off and unplug all connections. **USE UNLEADED GASOLINE ONLY.**

TROUBLESHOOTING

1. **Problem 1:** Motor switch is in the OFF position.
2. **Problem 2:** No gas in the gas tank.
3. **Problem 3:** Choke lever not set to the "Start" position which is the left side.
4. **Problem 4:** The two circuit breakers are tripped and need to be reset. All you have to do is push the two buttons in next to the outlets.
5. **Problem 5:** Gas switch is turned off. Make sure gas switch is pointed up.
6. If generator still does not work after troubleshooting the 4 potential problems please call our office at 562-841-7719 for further assistance. If you fail to call the office to report the problem, or you refuse an exchange we will not issue a refund.

IMPORTANT

MAKE SURE NOTHING IS PLUGGED IN WHEN YOU START THE GENERATOR. WHEN YOU WANT TO TURN IT OFF UNPLUG ALL OUTLETS BEFORE SHUTTING IT OFF.

EXCHANGES

If you have any problems at all with your machine rental, it is very important that you contact the office at 562-841-7719 and speak to someone about it. We will try to troubleshoot it over the phone, and if that does not work we will send someone out to fix it or exchange the machine. If you fail to call or refuse an exchange a refund will not be issued.