



Cindy's Jumpers
Kettle Corn Machine Rental
Operating Instructions
562-841-7719

INSTALLATION

1. Place the unit in a prominent location on a level counter, where the popping popcorn will attract attention.
2. Precaution should be taken so customers do not come in contact with the hot unit.
3. Plug the power cord into a suitable 120 volt outlet that can provide the required wattage. Having other appliances on a circuit, may prevent your unit from receiving the necessary voltage.

GENERAL OPERATING PROCEDURES

1. Add one bag of pre-measured popcorn, and coconut oil to the kettle.
2. Turn all three buttons on top of the machine upward, to the ON position. The first button from left to right is the lamp light, the second button is to for the corn to rotate inside the kettle, and the last button on the right side is for the kettle to heat up.

NOTE:

Sometimes the kettle becomes disconnected from the machine. Make sure to check the black cable that's inside the machine and make sure it's connected to the bottom of the kettle.

3. Once you hear the first kernel pop, then at this time you add the 4oz Kettle Corn Mix to the kettle. (see photo of kettle mix)
4. Once the popping slows down, turn off the heat and dump out the kettle corn. Do not let it sit too long or else it will burn and it will burn the rest of the batch.

NOTE:

If you fail to turn the kettle heating button off and there is no popcorn in the kettle it will burn the kettle and damage the machine. Never leave the kettle ON without popcorn in it.

5. One pre-measured popcorn bag makes 10 (1oz) servings. You may only pop one pre-measured popcorn kits at one time.



COOKING

One pre-measured popcorn bag will take about 5 minutes to pop all the popcorn when the kettle is hot. Make sure to turn off the heat and rotating buttons after the batch of popcorn finishes so you don't burn the popcorn.

CLEANING

No Cleaning is required just empty out all the leftover popcorn.

TROUBLESHOOTING

If you have any problems at all with your machine rental, it is very important that you contact the office at 562-841-7719 and speak to someone about it. We will try to troubleshoot it over the phone, and if that does not work we will send someone out to fix it or exchange the machine. If you fail to call or refuse an exchange a refund will not issued.