



Cindy's Jumpers Snow Cone Machine Rental Operating Instructions

INSTALLATION

1. Place the unit in a prominent location on a level counter, where the shaved ice will attract attention.
2. Precaution should be taken so customers do not come in contact with the unit since it has sharp blades.
3. Plug the power cord into a suitable (20 amp) 120 volt outlet that can provide the required wattage. Having other appliances on a circuit, may prevent your unit from receiving the necessary voltage.
4. Regular ice cubes are required for this machine. These bags can be purchased at any local grocery store.

GENERAL OPERATING PROCEDURES

1. Place ice on the top hopper.
2. Turn the machine to the ON position and hold the start button at all times.

NOTE:

The start button must be pushed it at all times for the motor to work. Once you stop pushing in the start button the motor will turn off, but remember to turn the button on machine to the OFF position.

3. You will need approximately ½ pound of ice per snow cone serving.
4. Try to only shave the amount of ice you need for your servings since shaved ice melts faster than ice cubes.

SERVING

1. Scoop out the shaved ice from the machine with the scooper into a cone or cup and top it off with your favorite syrup.

CLEANING

No Cleaning is required just empty out all excess water out.

TROUBLESHOOTING

If you have any problems at all with your machine rental, it is very important that you contact the office at 562-841-7719 and speak to someone about it. We will try to troubleshoot it over the phone, and if that does not work we will send someone out to fix it or exchange the machine. If you fail to call or refuse an exchange a refund will not issued.

