



Jump N Bounce

Popcorn Machine Operating Instructions

jumpnbounce.com | 714.744.4433

SETUP

1. Place the popcorn machine on a flat surface, like a table or counter.
2. Precaution should be taken so no one comes in contact with the hot unit.
3. Plug in a standard outlet. Having other items plugged in the same circuit may prevent getting enough power.

HOW TO OPERATE

1. Add 1 popcorn kit into the kettle. **NOTE:** You may only pop 1 popcorn kit at a time.
2. Turn ON all three buttons.
 - a. WARMER (Left Button) - is the lamp light and popcorn warmer.
 - b. STIRRER (Middle Button) - is for the corn to rotate inside the kettle.
 - c. POT HEATER (Right Button) - is for the kettle to heat up.
3. When the popping has stopped, turn off the middle (stirrer) and right (pot heater) buttons. You can leave the Left (warmer) button ON, to keep the popcorn warm.
4. Empty the extra popcorn in the kettle by pulling the kettle handle down. **NOTE:** Not turning OFF the POT HEATER button when no popcorn is in the kettle will burn and damage the machine. Never leave the POT HEATER on without popcorn in the kettle.

COOKING

1 popcorn kit will take about 3-5 minutes to pop all the popcorn, when the kettle is hot. Make sure to turn off the heat and rotating buttons after the batch of popcorn finishes so you don't burn the popcorn.

CLEANING

Cleaning is not required, just remove all the leftover popcorn.

TROUBLESHOOTING

If the kettle gets disconnected from the machine, make sure the black cable is plugged in the machine.

If you have an issue with the popcorn machine, please contact us at 714.744.4433. If we aren't contacted at the time of the issue, we will not be able to offer a refund.