

→ **IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE ATTEMPTING TO USE THIS MACHINE** ←

→ **KEEP ALL MINORS & SPECTATORS AT A SAFE DISTANCE FROM THE MACHINE AT ALL TIMES** ←

	<p style="text-align: center;"> DANGER</p> <p>Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. DO NOT immerse any part of this equipment in water. DO NOT use excessive water when cleaning. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle.</p> <p style="text-align: right;">008_051514</p>
	<p style="text-align: center;"> WARNING</p> <p>Floss head rotates at high speeds. Operator MUST keep hands and face clear of the floss head to avoid injury. Operator must wear eye protection. Keep all spectators at a reasonable distance, and use a Floss Bubble for added customer protection.</p> <p style="text-align: right;">015_062714</p>
	<p style="text-align: center;"> WARNING</p> <p>Keep all foreign objects out of floss head. To avoid eye injury, DO NOT fill floss head with sugar while the head is on and rotating.</p> <p style="text-align: right;">016_010914</p>
	<p style="text-align: center;"> WARNING</p> <p>Burn Hazard. DO NOT touch spinner head. Allow to cool before cleaning or servicing. Avoid contact with molten sugar.</p> <p style="text-align: right;">006_092414</p>
	<p style="text-align: center;"> WARNING</p> <p>This machine is NOT to be operated by minors.</p> <p style="text-align: right;">007_010914</p>

IF YOU HAVE ANY QUESTIONS, DOUBTS, PROBLEMS OR CONCERNS AT ANY TIME DURING YOUR RENTAL, STOP AND CALL US AT 833-5-LITTLE, AND SELECT EXT 3 TO SPEAK WITH 24/7 ACTIVE RENTAL SUPPORT

Motor & Master Switch: Turns motor (spinning head) on/off and supplies power to the Heat Switch.

Heat Switch: Turns the heating element on/off.

Heat Control: Adjusts power to the heating element.
Note: This has been pre-set for your convenience.





Lock-N-Go Handle: Locks/unlocks the Bell Housing (spinning head) for transport.
Prior to operation, rotate both Lock-N-Go handles to the vertical position.





→ NEVER OPERATE WITH LOCK-N-GO HANDLES IN TRANSPORT (HORIZONTAL) POSITION ←

PREPARING AND POWERING ON THE MACHINE

	 WARNING
	Floss head rotates at high speeds. Operator MUST keep hands and face clear of the floss head to avoid injury. Operator must wear eye protection. Keep all spectators at a reasonable distance, and use a Floss Bubble for added customer protection. <small>015_062714</small>


- 1) The Heat Switch and the Motor & Master Switch should be in the OFF position.
- 2) With the spinner head NOT spinning, pour Flossugar into the center of the spinner head.
 - **ALWAYS** fill to ~90% - **DO NOT OVERFILL!** (If using Flossugar pouches, use the entire pouch.)
 - **NEVER ADD FLOSSUGAR** when motor is running (ie when spinner head is spinning)!
 - **ONLY USE THE FLOSSUGAR SERVING KITS SUPPLIED BY THE COMPANY!**
- 3) Turn the Motor & Master Switch ON. Wait 10 seconds, THEN turn the Heat Switch ON.
- 4) The Heat Control Knob has been pre-set and removed for your convenience.

	 WARNING
	<ul style="list-style-type: none">• DO NOT PUT HANDS OR OBJECTS IN ROTATING SPINNER HEAD.• DO NOT FILL SPINNER HEAD WITH SUGAR WHILE IT IS ROTATING.• WEAR EYE PROTECTION.• DO NOT PUT HANDS NEAR ROTATING SPINNER HEAD.• USE FLOSS CONE TO COLLECT COTTON CANDY. <small>032_021914</small>

IF YOU HAVE ANY QUESTIONS, DOUBTS, PROBLEMS OR CONCERNS AT ANY TIME DURING YOUR RENTAL, STOP AND CALL US AT 833-5-LITTLE, AND SELECT EXT 3 TO SPEAK WITH 24/7 ACTIVE RENTAL SUPPORT

HOW TO MAKE COTTON CANDY

- STEP 1) Pick a paper cone. If it won't come out, twist it off the stack. Grip the pointed end of the cone.
- STEPS 2-3) Roll the cone in the web of cotton candy in the pan until cotton candy starts sticking to the cone.
- STEP 4) With the cotton candy attached to the cone, lift the cone up from the pan and continuing rolling.
- STEPS 5-8) Keep rolling the cone to wrap more cotton candy as you move around the top edge of the pan.

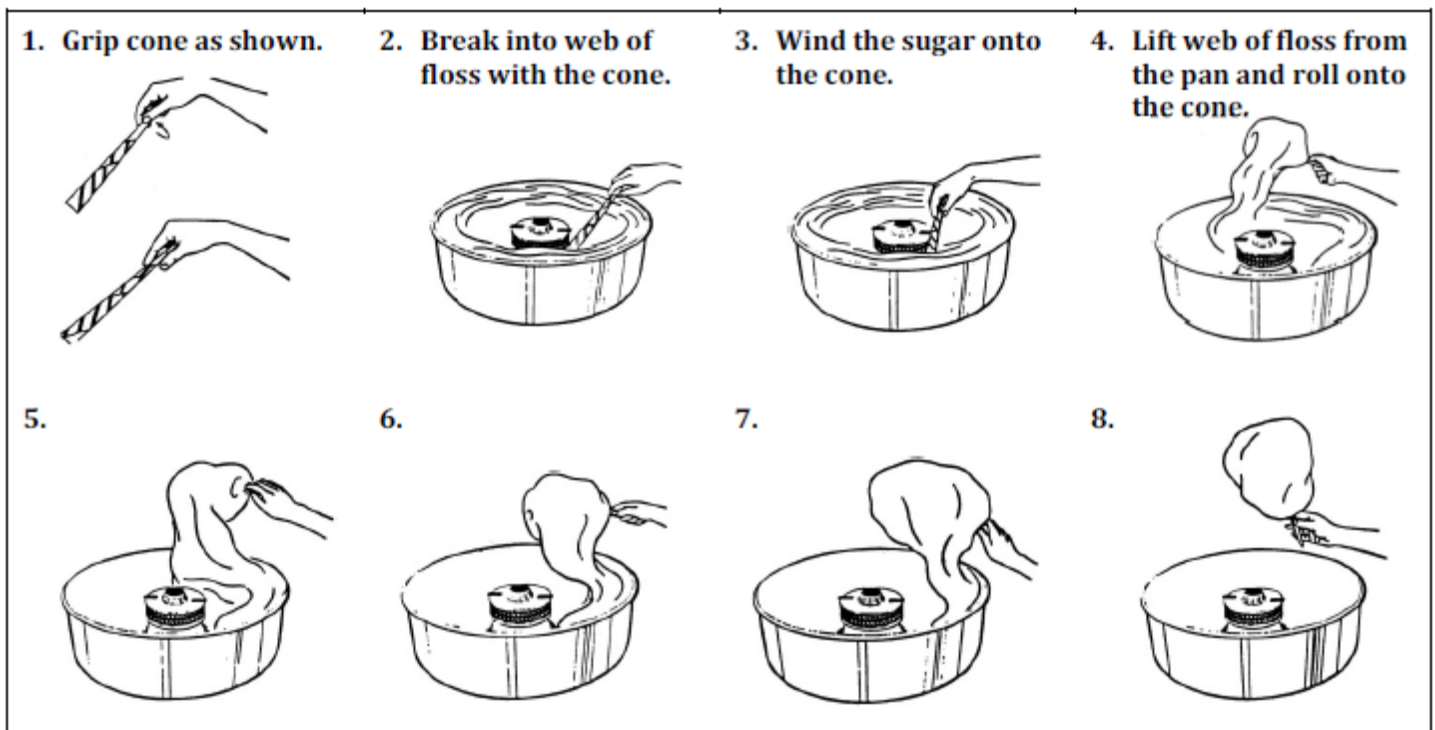

ONCE YOU HAVE A SUFFICIENTLY LARGE CONE OF COTTON CANDY, REMOVE THE COMPLETED COTTON CANDY CONE, AND PLACE IN THE STAINLESS STEEL COTTON CANDY STAND PROVIDED WITH YOUR RENTAL.

IMPORTANT: REPEAT STEPS 1-8 UNTIL MACHINE IS OUT OF FLOSSUGAR & STOPS PRODUCING COTTON CANDY

→ NEVER TURN OFF MACHINE WHILE STILL PRODUCING COTTON CANDY (EXCEPT IN CASE OF EMERGENCY)



REFILLING THE MACHINE

- 1) When the spinner head needs to be refilled with Flossugar, or to stop the machine, turn the Heat Switch to OFF and ALLOW THE MOTOR TO RUN FOR AT LEAST 1 MINUTE TO "COOL DOWN" THE SPINNER HEAD.
- 2) After waiting for at least one minute, turn the Motor & Master Switch to OFF.

→ **IMPORTANT** ←

FAILURE TO COOL DOWN SPINNER HEAD COULD RESULT IN LEAVING MELTED FLOSSUGAR IN SPINNER HEAD. IF MOTOR IS RESTARTED, THIS MELTED FLOSSUGAR WILL EXIT THE FLOSS AND COULD CAUSE BURNS

- 3) Refill and start over per the instructions on the "PREPARING & POWERING ON THE MACHINE" page and the "HOW TO MAKE COTTON CANDY" page.

SHUTTING DOWN THE MACHINE

- 1) When completing operation for the day (or any prolonged period), first ensure the machine has stopped producing cotton candy and is completely empty of Flossugar.
- 2) THEN turn the Heat Switch OFF and allow the motor (spinner head) to run for 1-2 minutes to "cool down".
- 3) FINALLY turn the Motor & Master Switch OFF and allow the motor to come to a COMPLETE stop. Unplug the power supply and ensure no untrained persons or minors are allowed near the machine.

→ **IMPORTANT: NEVER ATTEMPT TO CLEAN THE COTTON CANDY MACHINE YOURSELF** ←

→ **IMPORTANT: NEVER PUT WATER IN THE SPINNER HEAD OR ANYWHERE NEAR THE MACHINE** ←

→ **NEVER TURN OFF MACHINE WHILE STILL PRODUCING COTTON CANDY (EXCEPT IN CASE OF EMERGENCY)**

←

IF YOU HAVE ANY QUESTIONS, DOUBTS, PROBLEMS OR CONCERNS AT ANY TIME DURING YOUR RENTAL, STOP AND CALL US AT 833-5-LITTLE, AND SELECT EXT 3 TO SPEAK WITH 24/7 ACTIVE RENTAL SUPPORT
