









Safety & Operating Instructions

→ **IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE ATTEMPTING TO USE THIS MACHINE** ←

→ **KEEP ALL MINORS & SPECTATORS AT A SAFE DISTANCE FROM THE MACHINE AT ALL TIMES** ←

 
	<p style="text-align: center;"> DANGER</p> <p>Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. DO NOT immerse any part of this equipment in water. DO NOT use excessive water when cleaning. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle.</p> <p style="text-align: right;">008_051514</p>
	<p style="text-align: center;"> DANGER</p> <p>Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death. Any alterations to this equipment will void the warranty and may cause a dangerous condition. This appliance is not intended to be operated by means of an external timer or separate remote-control system. NEVER make alterations to this equipment. Read the Installation, Operating, and Maintenance Instructions thoroughly before installing, servicing, or operating this equipment.</p> <p style="text-align: right;">014_020416</p>
	<p style="text-align: center;"> WARNING</p> <p>To avoid burns, DO NOT touch the kettle or any heated surface. DO NOT place or leave objects in contact with heated surfaces.</p> <p style="text-align: right;">013_092414</p>
	<p style="text-align: center;"> WARNING</p> <p>This machine is NOT to be operated by minors.</p> <p style="text-align: right;">007_010914</p>

IF YOU HAVE ANY QUESTIONS, DOUBTS, PROBLEMS OR CONCERNS AT ANY TIME DURING YOUR RENTAL, STOP AND CALL US AT 833-5-LITTLE, AND SELECT EXT 3 TO SPEAK WITH 24/7 ACTIVE RENTAL SUPPORT

Kettle Heat Switch: Turns the heating element in the popping kettle on/off.


Kettle Motor Switch: Turns the kettle agitator motor on/off.
Must be kept ON at all times when the heating element in the kettle is on.

Lights/Warmer Switch: Turns the interior light and warmer on/off.

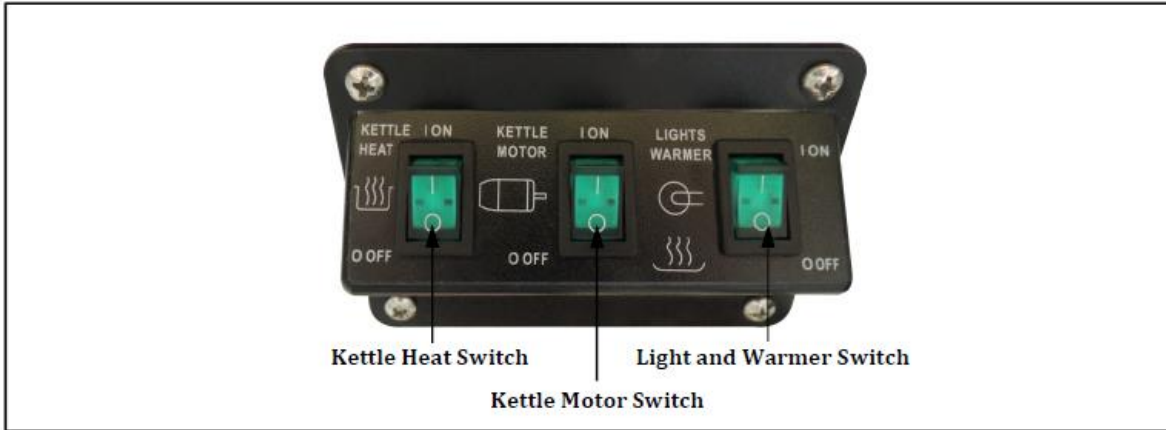


→ **BURN HAZARD: NEVER TOUCH THE KETTLE – ONLY USE THE BLACK KNOB TO TILT THE KETTLE** ←

 PREPARING THE MACHINE & POWERING ON

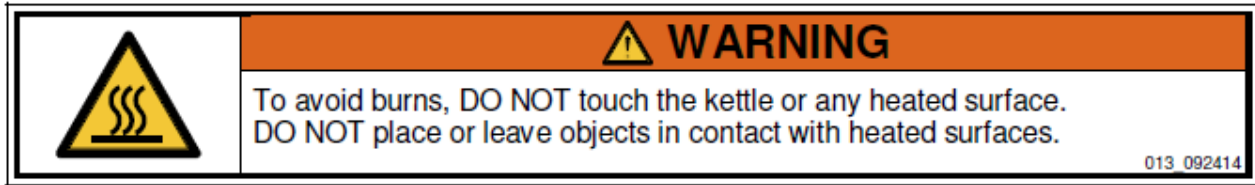


- 1) All switches should be in the OFF position.
- 2) Cut open ONE popcorn kernel/oil serving kit, lift the kettle lid and pour contents of kit into the kettle.
 - **NEVER ADD MORE THAN ONE SERVING KIT TO THE KETTLE!**
 - **ONLY USE THE POPCORN KERNEL/OIL SERVING KITS SUPPLIED BY THE COMPANY!**
 - **ENSURE THAT THE KETTLE HAS HAD A CHANCE TO COOL DOWN BEFORE OPENING THE KETTLE LID!**
- 3) Turn all three switches to the ON position. Popcorn should begin popping within 1-2 minutes.
- 4) Once the popcorn has finished popping (longer than 2 second gap between pops), use the black knob on the kettle to gently tilt the kettle and dump the popcorn.
 - **NEVER TOUCH THE KETTLE – ONLY USE THE BLACK KNOB TO GENTLY TILT THE KETTLE!**

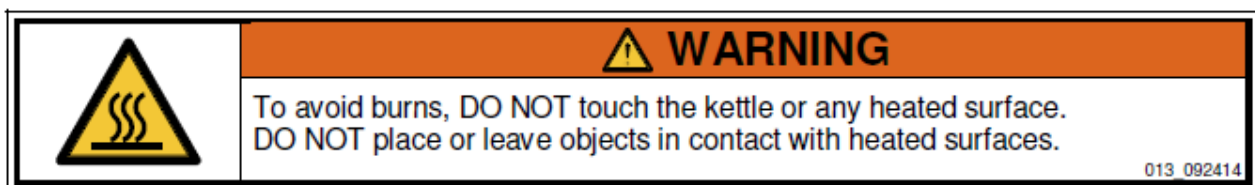 

- 5) After dumping the popcorn, turn both the Kettle Heat Switch and Kettle Motor Switch OFF.
 - **NEVER KEEP THE KETTLE HEAT SWITCH AND/OR KETTLE MOTOR SWITCH ON AFTER DONE POPPING!**

IF YOU HAVE ANY QUESTIONS, DOUBTS, PROBLEMS OR CONCERNS AT ANY TIME DURING YOUR RENTAL, STOP AND CALL US AT 833-5-LITTLE, AND SELECT EXT 3 TO SPEAK WITH 24/7 ACTIVE RENTAL SUPPORT

 POPPING MORE POPCORN

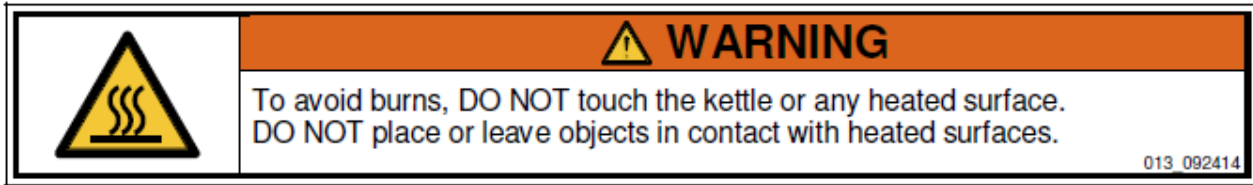

- 1) Once the kettle has cooled down, cut open ONE popcorn/kernel serving kit, open the kettle lid and pour contents of kit into the kettle.
 - **NEVER ADD MORE THAN ONE SERVING KIT TO THE KETTLE!**
 - **ONLY USE THE POPCORN KERNEL/OIL SERVING KITS SUPPLIED BY THE COMPANY!**
 - **ENSURE THAT THE KETTLE HAS HAD A CHANCE TO COOL DOWN BEFORE OPENING THE KETTLE LID!**

- 2) Turn the Kettle Motor Switch to the ON position.

- 3) Turn the Kettle Heat Switch to the ON position. Popcorn should begin popping within 1-2 minutes.

- 4) Once the popcorn has finished popping (longer than 2 second gap between pops), use the black knob on the kettle to gently tilt the kettle and dump the popcorn.
 - **NEVER TOUCH THE KETTLE – ONLY USE THE BLACK KNOB TO GENTLY TILT THE KETTLE!**

- 5) After dumping the popcorn, turn both the Kettle Heat Switch and Kettle Motor Switch OFF.
 - **NEVER KEEP THE KETTLE HEAT SWITCH AND/OR KETTLE MOTOR SWITCH ON AFTER DONE POPPING!**

→ **IMPORTANT: NEVER ATTEMPT TO CLEAN THE POPCORN MACHINE YOURSELF** ←

→ **IMPORTANT: NEVER PUT WATER IN THE KETTLE OR ANYWHERE NEAR THE MACHINE** ←

IF YOU HAVE ANY QUESTIONS, DOUBTS, PROBLEMS OR CONCERNS AT ANY TIME DURING YOUR RENTAL, STOP AND CALL US AT 833-5-LITTLE, AND SELECT EXT 3 TO SPEAK WITH 24/7 ACTIVE RENTAL SUPPORT
