



## The FUN Spinner Machine

### Included Items:

- The FUN Spinner Machine
- Corrugated Liner
- Newspaper Bottom Liner
- Card Stock
- Paint Bottles with Paint

### Electrical Requirements

- Normal amp draw for The FUN Spinner Machine at 120 volts is 9 amps.
- The power supply cord is equipped with a machine ground (the tubular prong). For safety, always plug the machine into a grounded receptacle.

### Operating Instructions

- Place the machine on a sturdy table or countertop with the controls facing the operator and the Plexiglas lid opening facing the user.
- Turn the switch in the back to the “On” position. Note: The FUN Spinner will not rotate while the lid is up.
- Place the card stock on the bracket inside the machine.
- Lower the lid. Upon lowering the lid, the spinner will start to turn.
- Using one bottle of paint at a time, drip the paint through the slot in the clear lid. Note: Use only a small amount of paint to avoid ruining the work and causing a mess.
- Movement of the paint up and down the length of the slot creates the best results. 2-3 Colors usually provides the best result. Using more than 3 colors often results in a brownish tone to the entire work.
- When satisfied with the painting, gently raise the lid and wait for the spinning to stop.
- Remove the card stock and place on a table or counter and allow to dry.

### Shut Down Procedures

- Turn the power switch to the “off” position.
- Unplug the machine.
- Remove the paint bottles from their holders and wipe clean.
- Carefully remove the cardboard liner and underlying newspaper from the machine and discard.
- Wipe up all paint inside the machine, including paint that may have built up on the bracket.
- Wipe the lid and outside of the machine and remove all paint spills and splatters.
- Replace paint bottles in their holders