



Bella's Bouncies Jump Center Lake Villa | 1600 N Milwaukee Ave (Route 83) | Lake Villa, IL 60046

Bella's Bouncies Skate on Grand | 720 E Grand Ave (Route 59) | Fox Lake, IL 60020

Bella's Bouncies Party and Event Rentals | 99 Christopher Way | Fox Lake, IL 60020

www.BellasBouncies.com | 847-546-7000 | bellasbouncies@yahoo.com

Cotton Candy Machine Instructions

CONTROLS AND FUNCTIONS

POWER SWITCH

Two position, ON/OFF lighted rocker switch - supplies power to the Candy Switch. The green switch light ON indicates there is power to the unit.

Immediate Power Off: To bypass the cooling cycle and immediately remove power from the machine, turn the Power Switch OFF.

CANDY SWITCH

Two position, "White" rocker switch - turns the motor and heating element ON/OFF. When turned OFF, the cooling cycle will start. After one (1) minute the cooling cycle completes, and the spinner head will stop rotating. Cooling is necessary to keep carbon from forming in the spinner head.

AUTO COOLING INDICATOR LIGHT

When lit, this amber light indicates the unit is in the cooling cycle. During the cooling cycle the spinner head will remain spinning.





Bella's Bouncies Jump Center Lake Villa | 1600 N Milwaukee Ave (Route 83) | Lake Villa, IL 60046

Bella's Bouncies Skate on Grand | 720 E Grand Ave (Route 59) | Fox Lake, IL 60020

Bella's Bouncies Party and Event Rentals | 99 Christopher Way | Fox Lake, IL 60020

www.BellasBouncies.com | 847-546-7000 | bellasbouncies@yahoo.com

OPERATING INSTRUCTIONS

1. With the Candy Switch OFF, turn the Power Switch ON. The spinner head will not start to rotate.
2. With the spinner head stopped, pour flossugar into the spinner head. Always fill it 90% full with sugar. This 90% level is necessary to obtain a balanced condition in the floss head. **DO NOT OVERFILL!**
IMPORTANT: NEVER add sugar when motor is running.
3. Turn the Candy Switch ON. The spinner head will rotate and heat. After about 30 seconds the machine will start to make cotton candy.
4. When the spinner head needs to be refilled with sugar, or to stop making cotton candy, turn the Candy Switch OFF. The cooling cycle will start. After 1 minute the cooling cycle completes, and the spinner head will stop rotating. When the spinner head is stopped, refill with flossugar. Turn the Candy Switch ON, and continue to make cotton candy.

Note: During the cooling cycle the spinner head will remain spinning. Cooling is necessary to keep carbon from forming in the spinner head. DO NOT use the Power Switch for normal operation of the machine. This will bypass the cooling cycle.

IMPORTANT: Failure to cool down the floss head could result in leaving melted sugar in the floss head. If the motor is restarted, this melted sugar will exit the floss head and could cause burns.

In addition, sugar left in the floss head may smoke or cause carbon build up.

Immediate Power Off: To bypass the cooling cycle and immediately remove power from the machine, turn the Power Switch OFF.

DO NOT PUT HANDS OR OBJECTS IN ROTATING SPINNER HEAD

OPERATOR SHOULD ALWAYS WEAR EYE PROTECTION

DO NOT PUT HANDS NEAR ROTATING SPINNER HEAD

USE FLOSS CONE TO COLLECT COTTON CANDY

Machine operates best when plugged in on its own breaker

A 110 outlet is required to operate




Bella's Bouncies Jump Center Lake Villa | 1600 N Milwaukee Ave (Route 83) | Lake Villa, IL 60046

Bella's Bouncies Skate on Grand | 720 E Grand Ave (Route 59) | Fox Lake, IL 60020

Bella's Bouncies Party and Event Rentals | 99 Christopher Way | Fox Lake, IL 60020

www.BellasBouncies.com | 847-546-7000 | bellasbouncies@yahoo.com

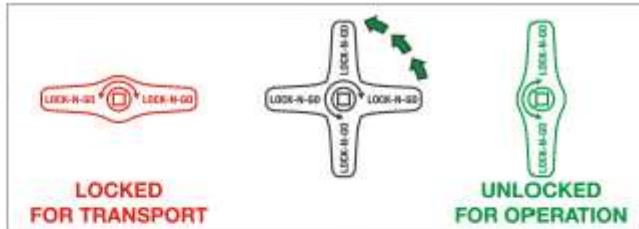


Step 1: Set unit on a level surface. **DO NOT** lift unit by spinner head.

Step 2: Lock-N-Go® handles are used for transport. Rotate both handles to a vertical, **UNLOCKED**, position for use. This allows the bell housing to "float" freely on the springs during operation. **DO NOT** operate with handles in the transport position.



Step 3: Place floss pan on unit.

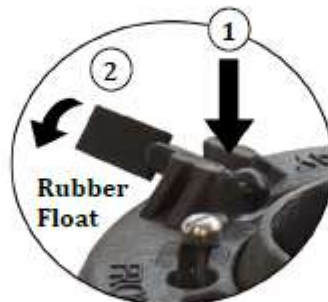

Step 4: Check the Rubber Floats; be sure they are fully inserted in float holders on Quick Release Floss Cap. Twist floaters to position shown to create a lifting action when making floss.



Bella's Bouncies Jump Center Lake Villa | 1600 N Milwaukee Ave (Route 83) | Lake Villa, IL 60046

Bella's Bouncies Skate on Grand | 720 E Grand Ave (Route 59) | Fox Lake, IL 60020

Bella's Bouncies Party and Event Rentals | 99 Christopher Way | Fox Lake, IL 60020

www.BellasBouncies.com | 847-546-7000 | bellasbouncies@yahoo.com


Rubber Float Adjustment

In operation, the floss will collect on the FLOSS STABILIZER. If the floss collects "low" on the stabilizer, twist the front (leading) edge of the rubber floats down (as shown below). This creates a lifting action to float the floss higher on the wall of the floss pan.

Be sure the rubber floats are fully inserted in the float holders on the Quick Release Floss Cap (see image below).



Rubber Float Adjustment

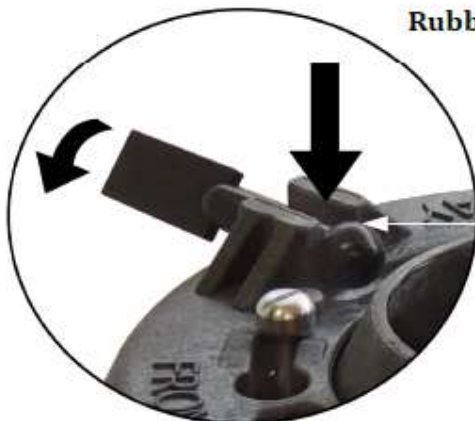

Rubber Float shown fully inserted in float holders on the Quick release Floss Cap with leading edge twisted down.