



Bella's Bouncies Jump Center Lake Villa | 1600 N Milwaukee Ave (Route 83) | Lake Villa, IL 60046

Bella's Bouncies Skate on Grand | 720 E Grand Ave (Route 59) | Fox Lake, IL 60020

Bella's Bouncies Party and Event Rentals | 99 Christopher Way | Fox Lake, IL 60020

www.BellasBouncies.com | 847-546-7000 | bellasbouncies@yahoo.com

Popcorn Machine Instructions

1. Turn on all 3 switches "Kettle Heat Switch", "Kettle Motor Switch" & "Light/Warmer Switch" to the "ON" position for 2-3 minutes. Warning: Use oven mitt as lid might be too hot for bare hands.
2. Place one of the premixed corn and oil packets in the kettle. Popcorn starts popping out through the lid after about 2 minutes & yields up to 10 cups per batch in less than 3 minutes.
3. After the corn has finished popping, rotate the handle to dump the popcorn. Do not wait too long or popcorn will burn.
4. Repeat the cycle starting with step 2.
5. The "Light/Warmer" switch may be left in the ON position.
6. When you are finished popping, make sure you turn the "Kettle Heat" switch and "Kettle Motor" switch off. Never leave the heat on when you are not popping. If you place oil in a hot kettle, remember to finish that popping cycle, or turn off the kettle. You can leave the "Light/Warmer Switch" on.
7. Turn all switches to "off" when finished.
8. Empty machine of all popcorn/debris before pickup or return.

Machine operates best when plugged in on its own breaker

A 110 outlet is required to operate