

Party Amarillo, LLC

Bull Horn

ATTENDANTS MUST READ HERE:

1. One adult attendant must be in charge of the bull horn.
2. Do not drop the bull horn.
3. Do not use the bull horn in wet conditions.
4. If sound is weak, the batteries may need to be replaced.
5. Use the bull horn at a safe distance from anyone's ears. It could cause damage to their hearing.
6. To operate the bull horn, turn on the on/off switch.
7. Press the "talk" button to activate the sound.
8. Adjust the volume control.
9. To activate the siren, turn on the siren button and push the talk button.

GAME SPECIFICATIONS:

The bull horn is a 25 watt megaphone with siren features.

It is lightweight and provides full frequency amplification over 729 yards.