

Party Amarillo, LLC

Fun Flush

PLEASE PROVIDE:

- 1 water faucet and hose that will need continuous flow
- 1 chair that can get wet

ATTENDANTS READ HERE:

1. Do not leave the Fun Flush unattended at any time.
2. Only throw the tennis balls provided. Do not use baseballs.
3. Use caution that spectators do not get in the way of the participant throwing the ball.
4. Do not allow anyone to climb on the game.
5. Do not allow spectators to hit target with their hands. It will take the suspense out of the game.
6. Do not use the Fun Flush in unsafe weather conditions, including lightning and high winds.

TO ASSEMBLE THE GAME:

1. The Fun Flush can be picked up in a car or truck.
2. Locate a flat area near water source.
3. The game can be set up on asphalt, concrete, or grass. If set up on dirt, mud will be created.
4. Location should be carefully selected so that the water will drain away from all other activity.
5. Place 2 long poles into the 2 base units. Unroll the net from the top cross bar and place it on top of the 2 upright poles.
6. Attach the net to the 2 side poles using the small bungee cords attached.
7. Remove the tennis balls and other parts that are stored in the Fun Flush tank.
8. Place the Fun Flush tank on top of the top cross bar.
9. Insert the spout into the back of the Fun Flush tank and secure it to the tank with the strap attached.
10. Make sure the spout opening is pointed down at the chair behind the netting.
11. Attach the water hose to the side of the Fun Flush tank. Confirm that there is a washer in the hose.
12. Secure the water hose to the Fun Flush frame using the bungee cords attached.
13. Install the target arm to the front of the tank in front of the net and secure it with the hitch pin.
14. Attach the target arm chain to the Fun Flush Tank handle.
15. The tension of the chain is very important to ensure the game will work properly. If the chain is too tight water will drip from the spout. If chain is too loose the game will not release water when the target gets hit.
16. Use the adjustable zip ties to adjust the tension on the chain.
17. Note that sometimes the wind will push on the target and allow some dripping from the spout. Move the Fun Flush out of the direct wind to keep this from happening.
18. To take down the game, drain the tank before attempting to remove it from the frame.