

Party Amarillo

Slip & Slide with Pool

ATTENDANTS READ HERE:

1. One adult attendant must supervise the unit. Do not leave the unit unattended at any time.
2. The attendant must read and understand the safety instructions; they are responsible to make all riders aware of the safety rules. Safety of the riders is the responsibility of the attendant.
3. CAUTION: The pool area must be directly supervised from the moment it has even one drop of water. A child could easily fall into the pool and drown.
4. Deflate immediately if high wind, rain, lightning, or thunder is present or approaching.
5. The inflatable must be securely staked at all times.
6. Only 1 at a time on the slide. Riders wait outside the unit for their turn.
7. Weight limit per person is 200 lbs. No infants allowed. Adults may not carry a child down the slide.
8. Do not allow anyone to go down the slide until the pool is filled with water.
9. Keep the tarps around the entrance and the exit of the slide. Do not turn the water up too high.
10. Do not allow anyone to participate who is intoxicated, pregnant, or has any other physical limitations, including neck, back, knee, or other disabilities that may jeopardize their safety.
11. Do not use the slide as a bouncing area or go up the slide the wrong direction. No rough play allowed.
12. Make sure the pool area is clear before the next rider goes down the slide.
13. No shoes, silly string, sharp objects, food, gum, confetti, glitter, or pets allowed.
14. Do not sit on the edge of the slide. Use the slide as it is intended.
15. Do not allow the motor or extension cords to get wet. Keep away from blower and extension cords.

TO ASSEMBLE THE GAME:

1. The inflatable is heavy and will take 2-3 strong men to set up the unit. Use caution when lifting.
2. Dimensions are approximately 8'W x 32'L x 9'H. Allow 5' clearance on all sides, including top.
3. Pick a flat, level location free from overhead obstacles like electrical lines or trees, and away from the vicinity of underground utilities or irrigation.
4. The location must be less than 50' from a 20-amp dedicated circuit and less than 50' from a water source.
5. Grass is the best surface. If on asphalt, stakes must be drilled into the pavement. The inflatable must be securely anchored at all times.
6. Do not inflate the unit if high wind or rain is present. Watch for severe weather approaching.
7. Unroll the vinyl roll. Locate the blower tubes extending from the unit.
8. Tie one tube securely around the blower. Make sure there are no kinks in the tube.
9. Tie off the other tube. Make sure all zippers are closed under the Velcro flaps.
10. Use the GFI breaker at the source of electricity coming from the outlet. **NO EXCEPTIONS!**
11. Allow the unit to inflate. Do not plug anything else into the same circuit or it will trip the breaker. (If a generator is used, it must be at least 4000 Watts)
12. Use only the extension cords provided. Do not remove the grounding pin from cord.
13. Immediately anchor the unit by inserting the stakes completely into the ground at a 90 degree angle. Attach a water hose to the hose on the slide. Turn the water on a low setting.
14. The blower will run continuously during the event.
15. Don't turn on water or inflate the slide until the trained attendant is in direct supervision of the unit.

TO TAKE DOWN THE GAME:

1. Clean all debris and mud from the inflatable. Please inform us if the inflatable is damaged.
2. Clean off the tarps and roll them up. Take off the top slide sheet and roll it separate from the slide.
3. Turn off and untie the blower. Allow the inflatable to deflate. Remove the blower and the stakes.
4. "Square up" the inflatable and fold it into thirds. Roll it very tightly and put ties around the roll.
5. Use extreme caution when handling the inflatable. It is heavy and will take 2-3 men to load.