

Party Amarillo, LLC

Sports Cage

ATTENDANTS MUST READ HERE:

1. One adult attendant must supervise the game. Do not leave your game unattended at any time.
2. Make sure the game is staked securely at all times.
3. Do not allow spectators to cross in front of the pitching area.
4. The attendant must read and understand the safety instructions and they are responsible to make all players aware of the safety rules. Safety of the players is the responsibility of the attendant.
5. Deflate immediately if high wind, rain, lightning, or thunder is present or approaching.
6. Do not allow anyone to climb in or on the inflatable. Do not use the balls outside the sports cage.
7. Do not allow anyone to participate who is intoxicated, pregnant, or has any other physical limitations, including neck, back, knee, or other disabilities that may jeopardize their safety.
8. No shoes, silly string, sharp objects, food, confetti, glitter, or pets allowed.
9. Don't allow the unit or motor to get wet. Keep people away from the blower and extension cords.

TO ASSEMBLE THE GAME:

1. The inflatable is heavy and will take 2 strong men to set up the unit. Use caution when lifting.
2. Actual dimensions are approximately 12'W x 22'D x 13'H. Allow 5' clearance on all sides.
3. Pick a flat, level location free from overhead obstacles like electrical lines or trees.
4. The location must be less than 50 feet from a 20 amp dedicated circuit.
5. Grass is the best surface. The inflatable must be securely anchored at all times.
6. Do not inflate the unit if high winds or rain is present. Watch for severe weather approaching.
7. Unroll the vinyl roll and locate the blower tubes extending from the unit.
8. Tie one tube securely around the blower. Make sure there are no kinks in the tube.
9. Tie off the other tube and make sure all zippers are closed under the Velcro flaps.
10. Plug the blower into a GFI outlet and allow the unit to inflate. Do not plug anything else into the same circuit or it will trip the breaker. (If a generator is used, it must be at least 4000 Watts)
11. Use only the extension cords provided. Do not remove the grounding pin from cord.
12. If the blower is used on a gym floor, place a mat under the blower.
13. Immediately anchor the unit by inserting the stakes completely into the ground at a 90 degree angle straight into the ground.
14. Attach one backdrop to the inflatable and secure the other backdrop and balls in the bag provided.
15. The blower will run continuously during the event.

TO TAKE DOWN THE GAME:

1. Clean all debris from the inflatable. Please inform us if the inflatable is damaged, dirty, or wet.
2. Turn off and untie the blower. Allow the inflatable to deflate. Remove the blower and the stakes.
3. "Square up" the inflatable and fold it into thirds. Roll it very tightly and put ties around the roll.
4. Use extreme caution when handling the inflatable. It is heavy and will take 2-3 men to load.

DIGITAL RADAR (IF ADDED):

1. Place the radar gun on the tripod using the "clip" and place it directly behind the backdrop.
2. Plug in the digital score board or turn it on if using batteries and place it in front of the unit, where it will not be a tripping hazard and score is visible.

3. Press the red power button on the radar, and press the trigger button. The “speaker” symbol will display.
4. If the radar gun shows “VOLT”, the batteries need to be replaced. Extra batteries are provided in bag.